

1. Pair RF Receiver with RF remote:


- 1.1. Connect and wire up the RF receiver correctly, power on.
- 1.2. Turn on the remote, click the "Learning Key" button on receiver, immediately click zone number then touch color wheel on remote, the connected led light on receiver flickers twice, means well paired.
- 1.3. When connected to Push Switch, short press push switch for switch ON/OFF, long press push switch to dim up/down the brightness

Note: one receiver can be paired with max 8 remote controls.

2. Delete the pairing:


- 2.1. Wire up the RF receiver correctly, power on
- 2.2. Hold the " Learning Key" button on receiver over 3 seconds until the connected led light on receiver flickers twice, means well deleted.

Wiring diagram

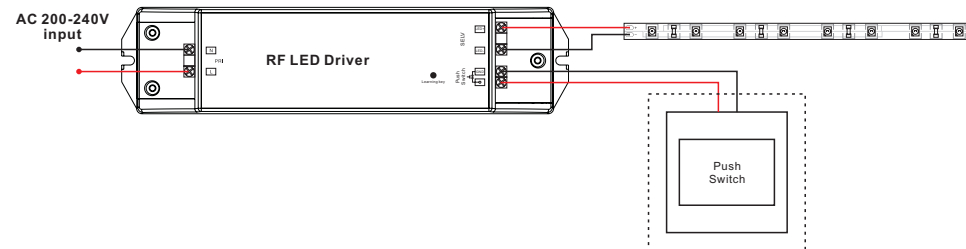

Picture

Function introduction

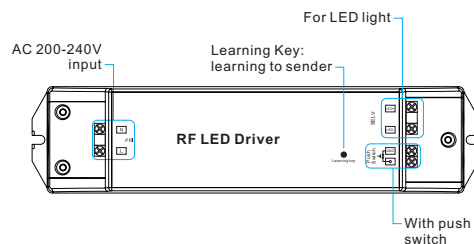

- Waterproof grade: IP20
- Radio Frequency : 868mhz

Input Voltage	Output Voltage	Output Power	Output Current
200-240VAC	1x24VDC	1x50W max	1x2.08A

Size

