


When connected to Push Switch, click push switch for switch ON/OFF

**Important:** Read All Instructions Prior to Installation

**Function introduction**

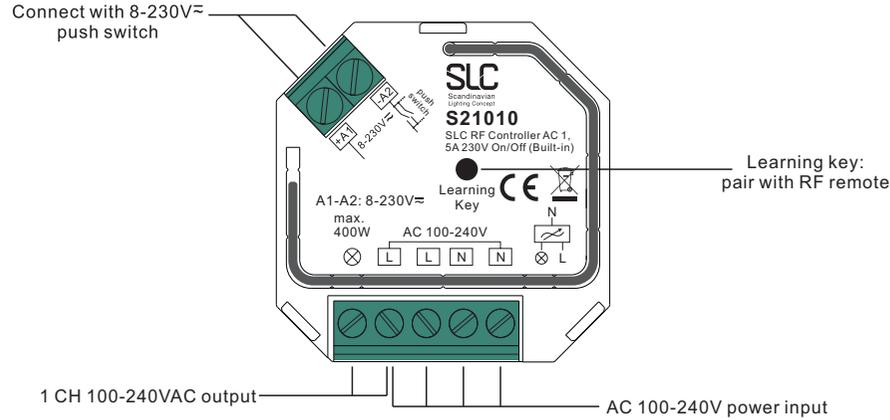

**Product Data**

Input Voltage	Output Voltage	Output Power	Size(LxWxH)
100-240VAC	100-240VAC	1x400W max	45.5x45x20.3mm

- Radio Frequency : 868/915/434mhz
- Waterproof grade: IP20

- 100-240VAC Wide Input and Output Voltage
- 1 Channel Output, Up to 400W
- Input and Output with Screw Terminals, Safe and Reliable
- Great Compatibility with Universal 8V-230V~ Input Push Switches
- Great compatibility with a variety of Perfect RF series single color remote controls
- To switch single color LED lamps
- Mini Size, Easy to be Installed into a standard 86\*86mm wall box

**Safety & Warnings**

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

**Operation**

Do wiring according to connection diagram.

**Pair RF Receiver with RF remote:**


1. Connect and wire up the RF receiver correctly, power on.
2. Turn on the remote, click the **“Learning Key”** button on receiver, immediately click a zone number to pair the receiver to the specified zone if the remote is a multi-zone controller (if it is a single zone remote, this step is unnecessary), then touch the color wheel or slider bar on the remote (if the remote does not have color wheel or slider bar, click or touch any keys), the connected led light on receiver flickers twice, which means well paired.

**Note:** one receiver can be paired with max 8 remote controls.

**Delete the pairing:**


1. Wire up the RF receiver correctly, power on.
2. Hold down the **“ Learning Key”** button on receiver for over 3 seconds until the connected led light on receiver flickers twice, which means well deleted.

**Wiring diagram**

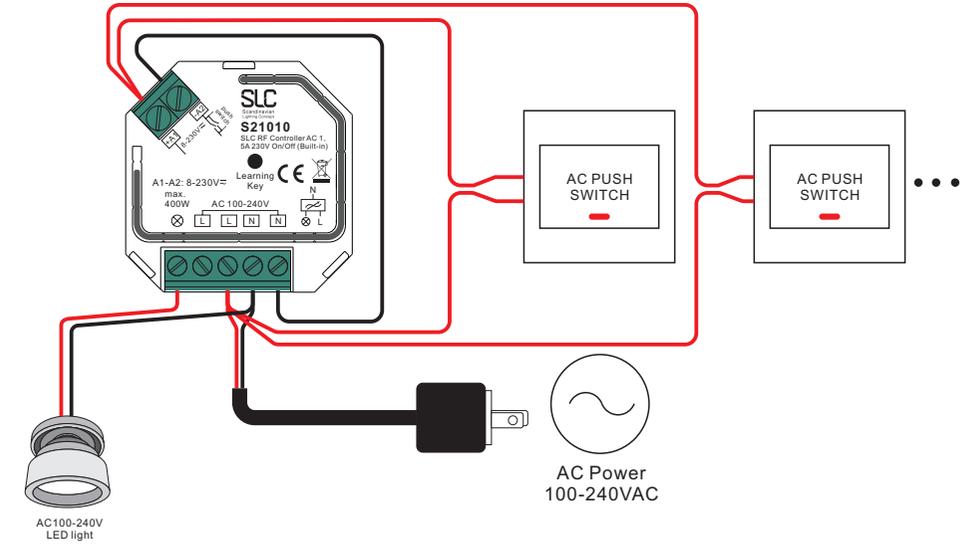

**If you use multiple receivers, you have two choices:**

Option 1: have all the receivers in the same zone, like zone 1

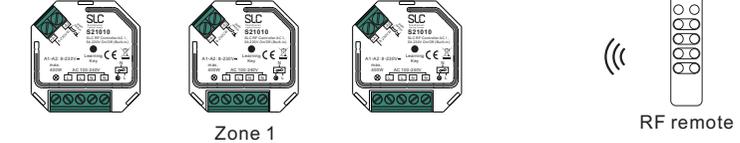

Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4

