


Prelude Square Outlet

  IP44* IK05

220-240V, 50/60Hz

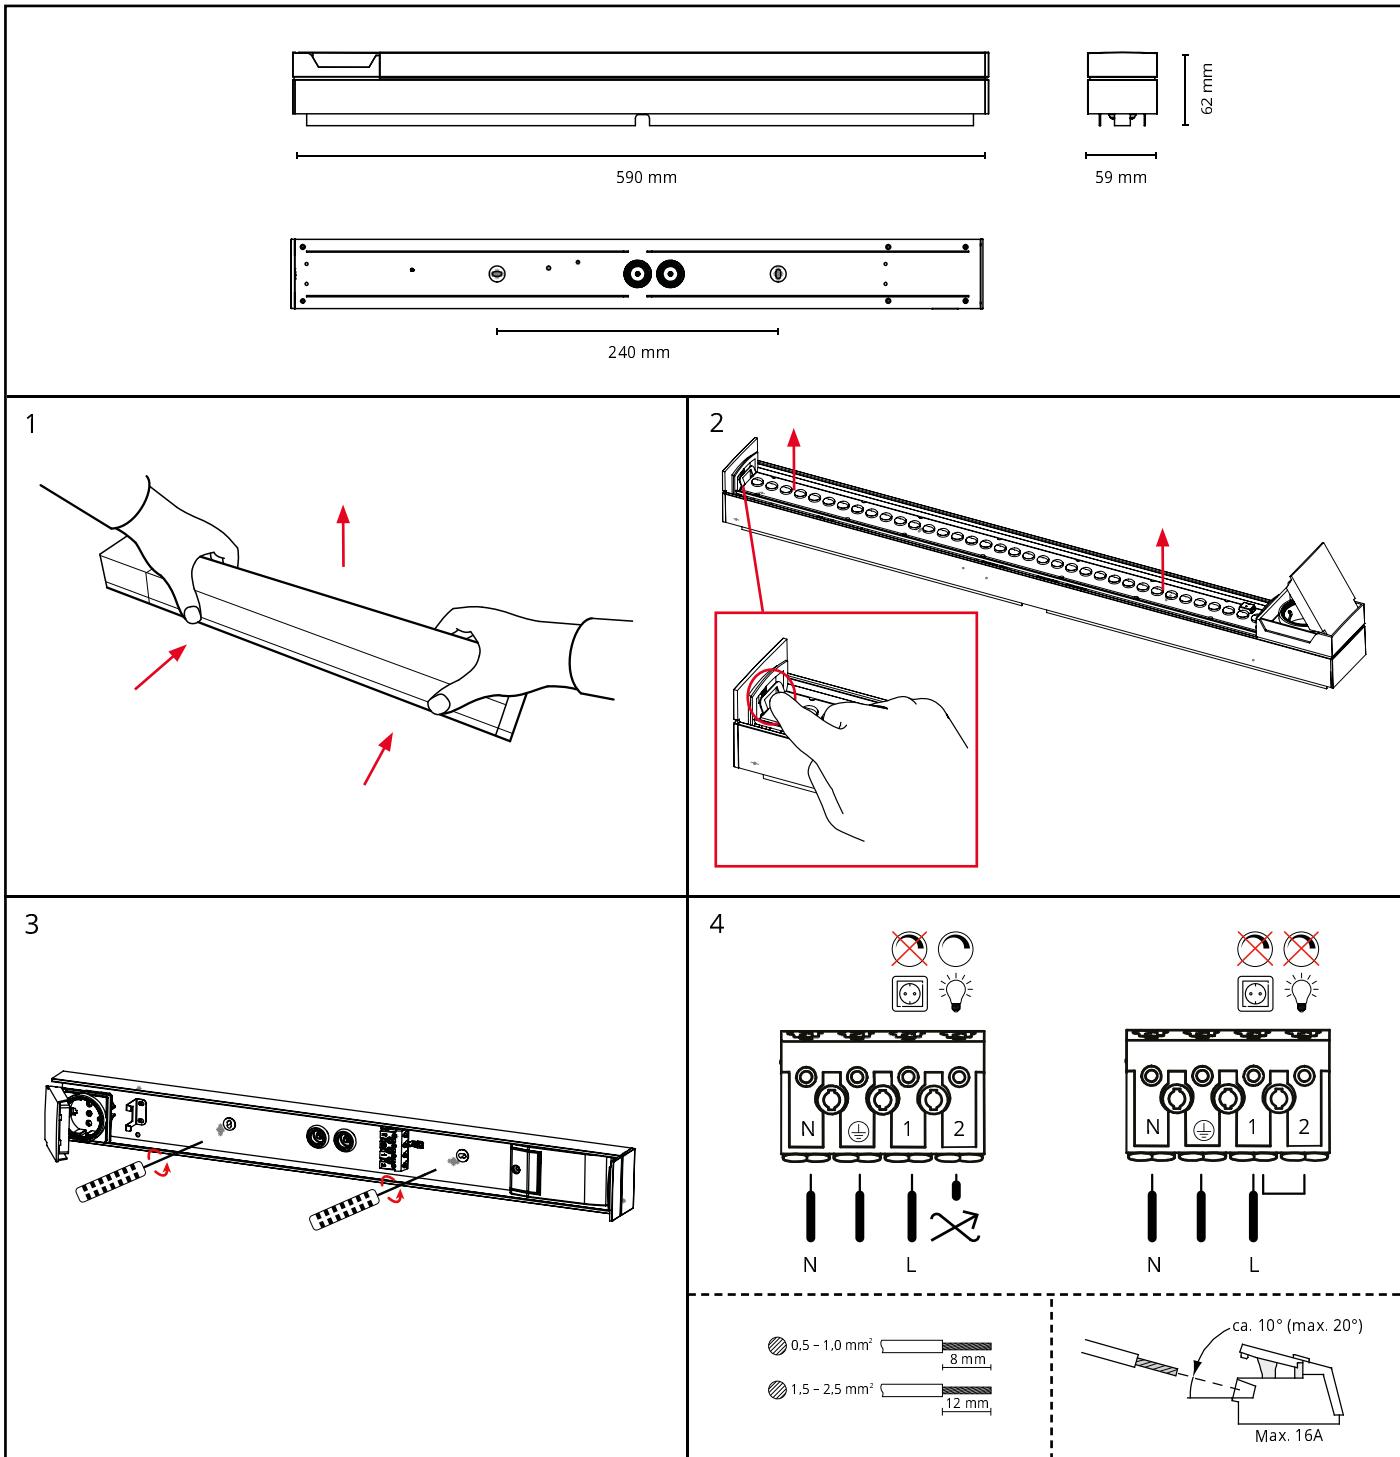

NORWAY
SG Armaturen AS

Skytterheia 25
N-4790 Lillesand

Tel: +47 37 50 03 00
firmapost@sg-as.no
www.sg-as.no

SWEDEN
SG Armaturen AB
Tel: +46 31 81 71 10
info@sg-ab.se
www.sg-ab.se

FINLAND
SG Armaturen Oy
info@sg-oy.fi
www.sg-oy.fi

DENMARK
SG Armaturen A/S
Tel: +45 70 70 72 13
info@sg-as.dk
www.sg-as.dk

UNITED KINGDOM
SG Lighting LTD
Tel: +47 37 50 03 00
info@sglighting.co.uk
www.sglighting.co.uk


FRANCE
SG Lighting SA/NV
Tel: +33(0) 4 94 93 00 00
info.france@sglighting.fr
www.sglighting.net

BENELUX
SG Lighting SA/NV
Tel: +32(0) 15 20 72 71
info.benelux@sglighting.net
www.sglighting.net



GERMANY
SG Leuchten GmbH
Tel: +49 40 23 99 44 59
info@sg-leuchten.de
www.sg-leuchten.de

INTERNATIONAL
SG Lighting Co Ltd.
Tel: +86 769 88 49 20 88
cindy@sgdgcn.com
www.sg-as.com

5

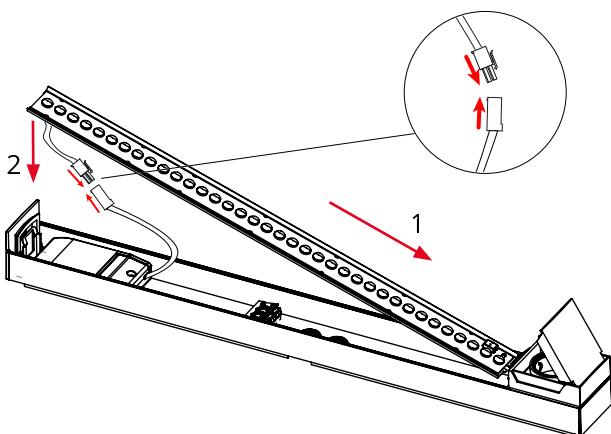

6

 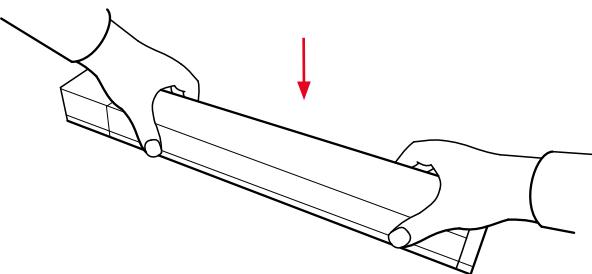


*IP44



*IP40

NO: Kan kun installeres og vedlikeholdes av en registrert installasjonsvirksomhet.**DK:** Må kun installeres og vedlikeholdes af uddannet elektriker.**SE:** Skall installeras och underhållas av behörig elektriker.**EN:** Only to be installed and maintained by an authorized electrician.**FR:** Doit être installé et maintenu par un électricien qualifié.**NL:** Mag alleen geïnstalleerd en onderhouden worden door een bevoegde elektricien.**DE:** Dieses Produkt darf nur durch autorisiertes Personal (z.B. Elektro-Installateur) angeschlossen, in Betrieb genommen und gewartet werden.**FI:** Asentaa ja huoltaa saa vain valtuutettu sähköasentaja**NO:** Skru av strømmen før montering.**DK:** Sluk for strømmen inden montering.**SE:** Stäng av strömmen innan montering.**EN:** Turn off power before installing.**FR:** Couper le courant avant l'installation.**NL:** Stroom uitschakelen voor u het toestel installeert.**DE:** Vor Installationsarbeiten den Strom abschalten.**FI:** Sammuta virta ennen kyttemistä

Dipswitch

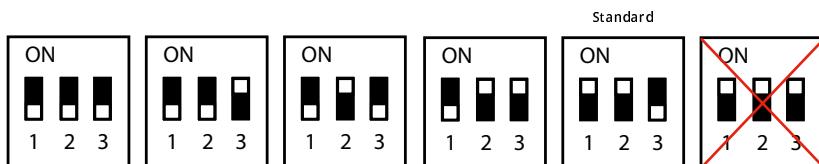

mA	200	250	300	350	400	450
Im	50%	63%	75%	88%	100%	-

