

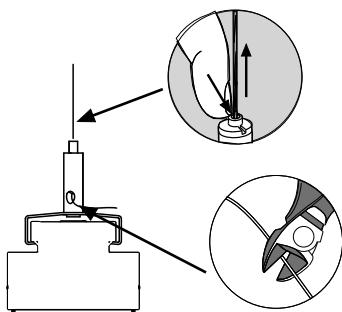
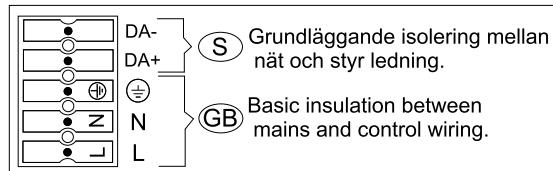
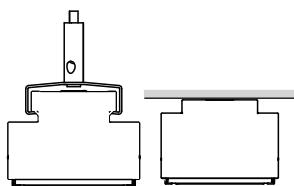



Optilume

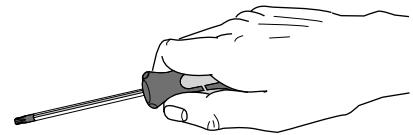

PullSwitch

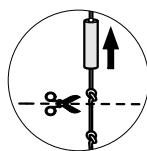

Sensor

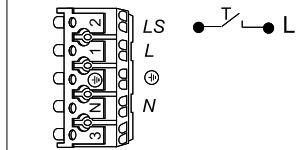


1200
Min 2 suspension











1500
Min 2 suspensions




3000
Min 3 suspensions

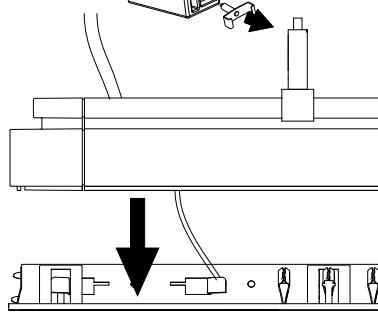

3000

     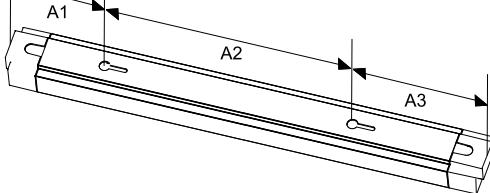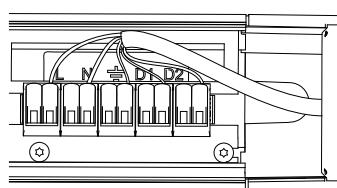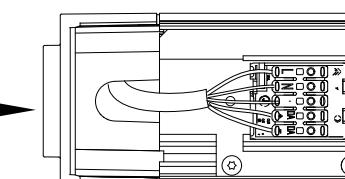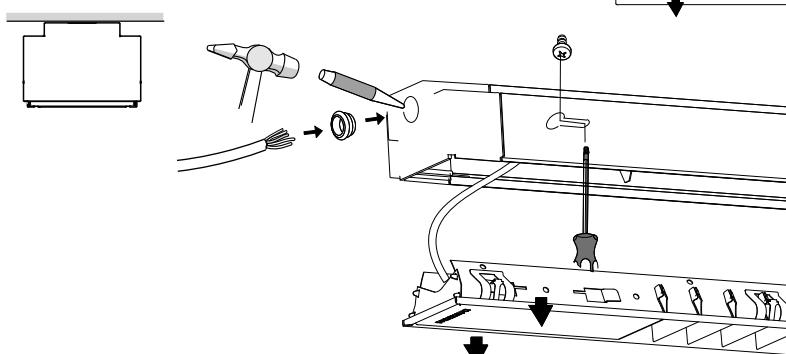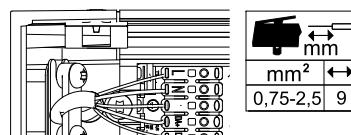

Module	A1	A2	A3
1200	117	1000	166
1500	132	1200	182

 

S Det är lämpligt att denna information överlämnas till användaren av anläggningen.

D Diese Informationen sind für den Benutzer der Anlage vorgesehen.

GB It is appropriate that this information is passed on to the users of the installation.

SF Nämä ohjeet tulee säilyttää ja luovuttaa kiinteistön käyttäjälle.

Ljuskällan ska endast bytas ut av tillverkaren eller hans utsedda person.

The light source shall only be replaced by the manufacturer or his designated person.