
 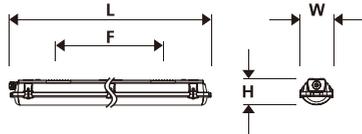





Manual Instruction

AC220-240V 50/60Hz

IP66




	L	W	H	F
1176mm	1176	102	81	770
1506mm	1506	102	81	870

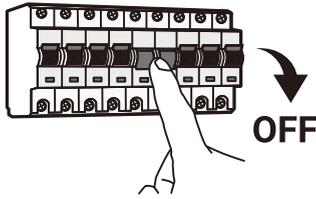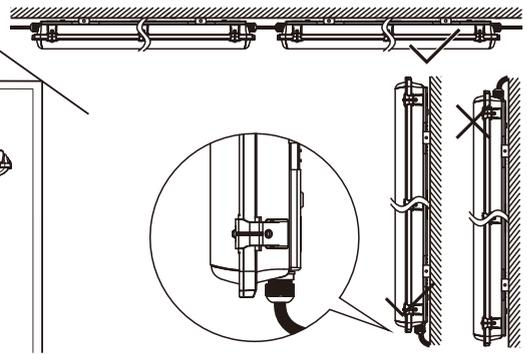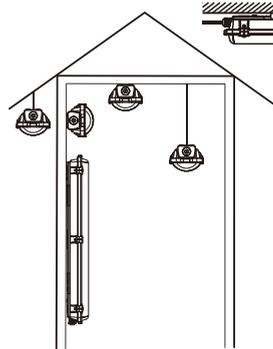


! WARNING

Switch off the power supply before installation

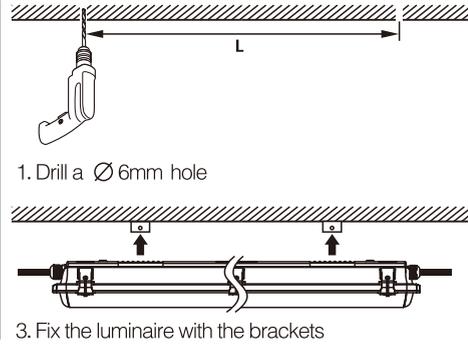


1. Drill a $\varnothing 6\text{mm}$ hole

3. Fix the luminaire with the brackets

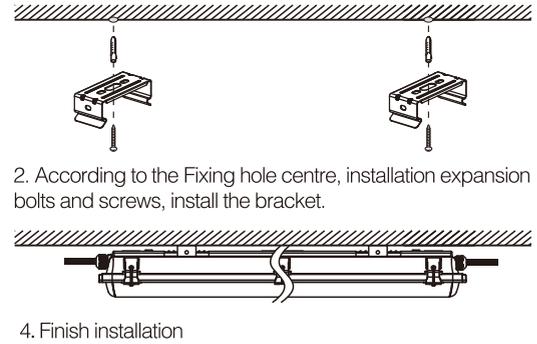


2. According to the Fixing hole centre, installation expansion bolts and screws, install the bracket.


4. Finish installation

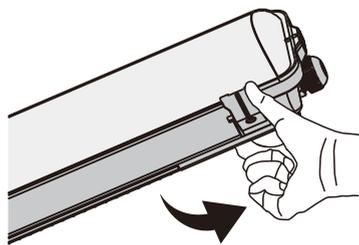


1. Unbuckle the clips

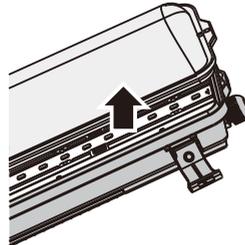


2. Take out the diffuser

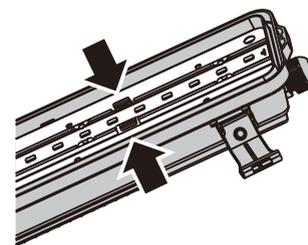


3. Push down the U brackets

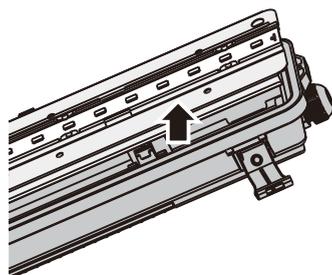


4. Take out of the LED module then

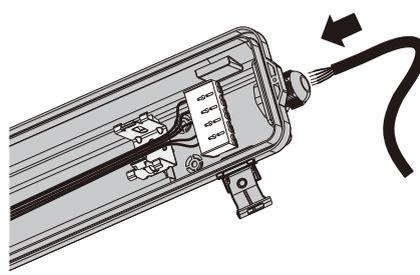


5. Insert the cable through the cable gland

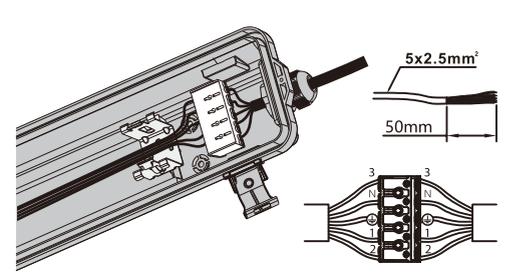


6. Connect the wires, 3 to 3, N to N, \ominus to \ominus , 1 to 1, 2 to 2

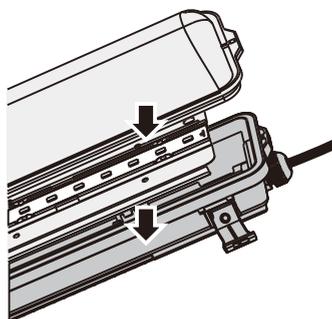



7. Put back the LED module and diffuser

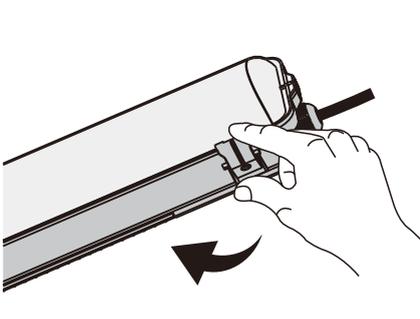

8. Buckle the clips

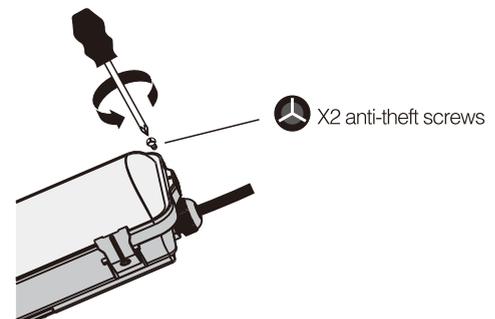

9. Tighten the anti-theft screws

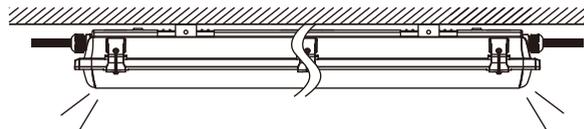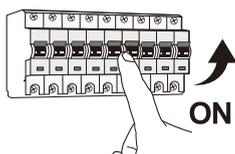

a-c
a-collection



! **WARNING**

- 1) Switch off the power supply before installation or do maintenance.
- 2) The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
- 3) The light source contained in this luminaire cannot be replaced; when the light source reaches its end of light the whole luminaire shall be replaced.

Caution, risk of electric shock



Annex Model List:

Model name	Rating input	Rating power	Max Interconnection amount
7215913	220 – 240 V~; 50/60 Hz	34 W	55 pcs
7215914	220 – 240 V~; 50/60 Hz	42 W	45 pcs
7215915	220 – 240 V~; 50/60 Hz	55 W	34 pcs
7216102	220 – 240 V~; 50/60 Hz	34 W	55 pcs
7216104	220 – 240 V~; 50/60 Hz	42 W	45 pcs
7216103	220 – 240 V~; 50/60 Hz	42 W	45 pcs
7216105	220 – 240 V~; 50/60 Hz	55 W	34 pcs
7215916	220 – 240 V~; 50/60 Hz	42 W	45 pcs