


User Guide Pentype Visual Fault Locator

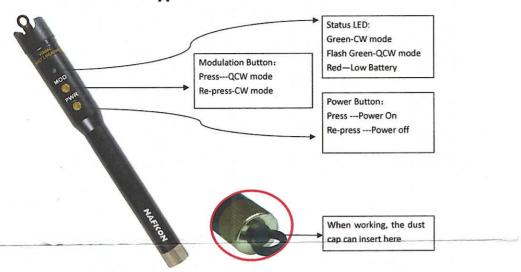

How to replace the ceramic tube?

