



SLIM II

ALASVALO | DOWNLIGHT ARMATUR | DOWNLIGHT

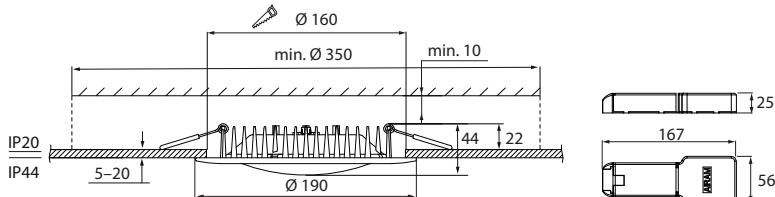

220–240V ~ 50/60 Hz

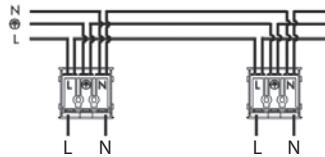

L = ruskea/brun/pruun/brown
 N = sininen/blå/sinine/blue




E = Maadoituksen jatkaminen / päättyminen
 E = Anslutning / avslutning av jordnings ledning
 E = Continuity / termination of earth wires



Valaisinta ei saa asentaa suoraan eristemateriaaliin.

Denna armatur är inte avsedd för att täckas med värmeisolering
material.

The luminaire is not suitable for covering with thermally insulated material.

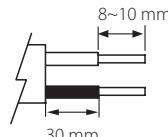

Valaisimen saa asentaa vain sähköalan ammattilainen. Käytä ainostaan syöttöjännitetä ja taajuutta joka on merkity valaisimeen/liitintälitteeseen. Kytke virta pois päältä ennen asennusta tai huoltoa. Tämä asennusohje on säilytettävä ja sen on oltava käytössä asennuksessa ja huollossa. Tämän valaisimen valonlähde ei ole vaihdettavissa. Kun valonlähde rikkoutuu, koko valaisin on poistettava käytöstä.

Vi rekommenderar att installationen görs av en behörig elektriker. Använd endast driftspänning och frekvens som är märkt på armaturen/förkopplingsdonet. Bryt stömmen före installation eller service. Denna monteringsanvisning bör sparas och finnas tillgänglig vid installation eller framtida service. Ljuskällan till denna armatur kan inte bytas ut. När ljuskällan når sin livslängd ska hela armaturen bytas ut.

Only a professional electrician is allowed to do the installation. Use only rated voltage and frequency as marked in the fixture/driver. Switch off the current before installation or service. This mounting instruction must be kept available during installation and for future maintenance. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

AIRAM

Airam Electric Oy Ab, Sementtiehtaankatu 6, FI-04260 Kerava, Finland, www.airam.fi

2019.12.04