

Daytona T2

next  green


Assembly instructions

E-nr: 24 803 56

S-No: 34 079 00

Wall mounting


When mounted on a wall where drilling is required, a 5.5 mm concrete drill is recommended. Screw and plug included.

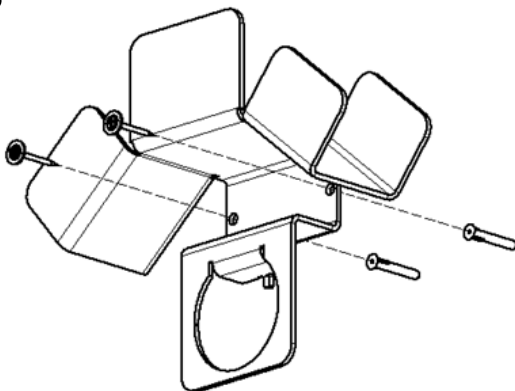

Pole mounting (accessory)

E-nr: 24 803 67. S-No: 34 079 04 - Bracket set for Daytona T2

Mounting on 60 mm pipe for a charging cable holder or two back to back.

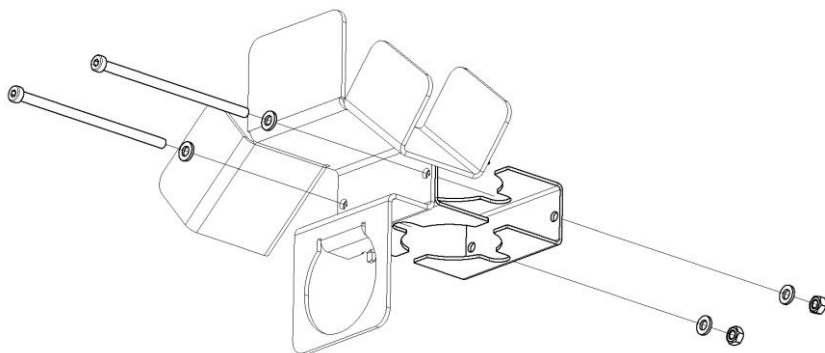


next  green

Next Green AB
Brudtallsvägen 14
792 32 MORA

www.nextgreen.se
info@nextgreen.se
Tel: +46 250 50 39 90

Väggmontering

Vid montering på vägg där det krävs borr rekommenderas en 5.5 mm betongborr. Skruv och plugg medföljer.

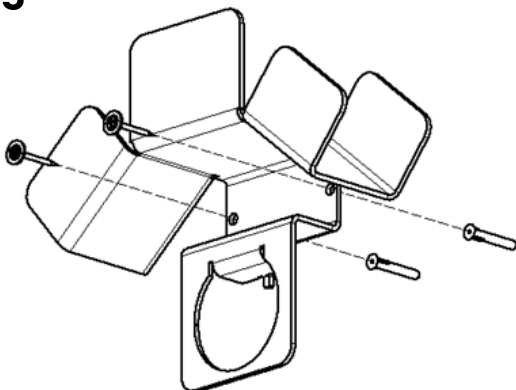

Rörmontering (Tillbehör)

2480367 – Klammersats till Daytona T2

Montering på 60 mm rör för en laddkabelhållare eller två rygg mot rygg.

