
CATALOG 2019

Arc Guard System™ – TVOC-2



Arc Guard System™ – TVOC-2

Table of contents

| | |
|----|--|
| 3 | Arc Guard System™ with communication module |
| 5 | Introduction |
| 6 | System description |
| 7 | Functionality |
| 8 | Ordering details |
| 10 | Technical data |
| | Applications |
| 12 | Basic installation tips |
| 13 | Diagrams |
| | Configuration |
| 14 | Trip condition configuration – Manual/auto reset configuration |
| 15 | Current condition configuration |
| 16 | Dimensions |
| 17 | Circuit diagrams |

Arc Guard System™ with communication module

Monitor your installation, anytime and anywhere

ABB is a leader in electrical safety with the TVOC-2 Arc Guard System™ providing an unrivaled optical arc mitigation device with SIL-2 safety certification. The plug-in communication module provides operators real time status updates and instant information regarding the location of any arcs.



Safety and protection

Saving lives and minimizing damage to equipment

With a market-leading reaction time of under 1 ms, TVOC-2 is already the fastest, most reliable arc guard solution available on the market. By adding the communication module, information regarding any trip travels faster, reaching the right people sooner.



Continuous operation

Keeping the business running

An arc flash accident can have a catastrophic effect on equipment and lead to outages. The TVOC-2 detects the light from an arc flash and, together with the installed breaker, cutting the current feeding the arc extremely quickly, minimizing disruption of the system.



Easy to install

Factory calibrated sensors

Configuration of the TVOC-2 is done in minutes and with the HMI verifying every setting done, it is extremely unlikely that mistakes will happen during the configuration. With the possibility to accommodate up to 30 sensors, the system is highly flexible and can grow with any system.

Marine and ships



Paper machine



Steel industry



Introduction

TVOC-2, ABB's Arc Guard System™, builds on the well known TVOC design. Its functions and features improve an already great product, putting even more focus on reliability, flexibility and simplicity.

Arc Guard System™ increases the protection of people and equipment, and minimizes unnecessary production stops. TVOC-2 is ABB's state-of-the-art solution for arc fault protection in all applications, providing functional safety.

With over 40 years of experience, Arc Guard System™ has become an industry standard in several key markets, helping to protect personnel and businesses around the world.

Typical applications include all low- and medium-voltage switchgears.

Reliability

- Certified according to functional safety (SIL-2) standard
- Over 40 years experience in Arc Guard Systems™
- Pre-calibrated optical sensors

Flexibility

- With IP54 high protection degree, HMI (Human Machine Interface) can be mounted on the panel door
- COM Module operates in the same way as HMI. With added ability to communicate with a remote station using Modbus RTU
- Expandable with up to 30 optical sensors
- Configure the system according to various needs

Simplicity

- User-friendly start-up menu
- DIN-rail or wall-mounted
- Easy to expand as the switchgear functions are added



System description

Short-circuit faults in LV and MV switchgears are often accompanied by an electric arc. An arc fault can lead to considerable damage to equipment and injury to personnel unless it is detected very quickly. To avoid serious damage and give the person involved a good chance of surviving the accident without severe injury, the fault should be disconnected as fast as possible, typically in less than 50 ms.

The Arc Guard System™ quickly detects an arc fault and trips the incoming circuit-breaker. Using light as the main trip criteria, it trips almost instantaneously. Thanks to this key functional advantage, it overrides all other protections and delays, which is crucial when reaction times need to be measured in milliseconds.

How it works

The system acts in three phases:

1 Detection

The TVOC-2 detects the light from an arc flash




2 Recognition

The system determines the intensity of light



The diagram below shows how the exponential increase in energy over time affects different switchgear materials.

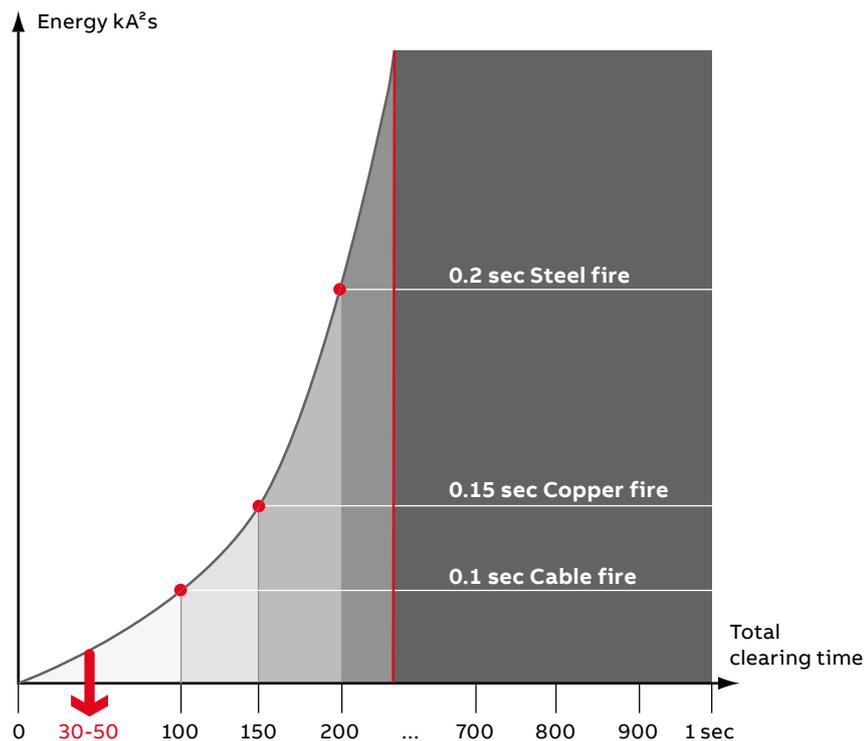

Total clearing time = ABB Arc Guard System™ + breaker

3 Action

The system sends signal to trip breaker(s)



Functionality

Arc monitor

With its modular concept, the Arc monitor is designed to fit all types and sizes of low- and medium-voltage switchgears.

It is designed according to functional safety, and is SIL 2-certified according to IEC 61508 and IEC 62061 which puts full focus on reliability. This corresponds to performance level d according to EN ISO 13849-1. Safety functions are exclusively handled by hardware. In addition, the system, trip logs and user-interface are all microprocessor-monitored.

The system can be configured to trip selected breakers, depending on which sensor that detects the light. The DIP-switches that take care of this function also handle settings like auto-reset and Current Sensing Units (see pages 12-13 for more details).

Energy is stored in the unit for operation up to 0.2 s if the supply voltage fails. This is sufficient to close the tripping circuit even if voltage disappears at a short-circuit fault.

Note: The circuit breaker still needs a back-up energy source for its tripping circuit.

Connections

All connections can be accessed from the front of the Arc Guard System™. Pluggable terminal blocks allow electrical wiring before mounting TVOC-2 into the cabinet. The solid state tripping contacts are type IGBT, which guarantees fast and reliable tripping.

More details can be found on page 8, technical data.

HMI (Human Machine Interface)

- Handles settings with key-pad and full text display
- Holds error log and trip information after power loss
- Error log and trip log include time/date stamp from a real-time clock
- TVOC-2 can handle two separate HMIs (cabinet door and on product)
- Three-meter cable included
- COM Module available using Modbus RTU

Sensor & sensor modules


- Fiber-optic sensors not affected by electrical noise
- Pre-calibrated sensors remove need for manual configuration
- Up to 30 detectors can be connected

Current Sensing Unit (optional)

The Current Sensing Unit (CSU) is an accessory needed only in those few specific applications where strong light is expected on a regular basis.

CSUs are connected with an optical fiber using light as signal for normal current. If this was removed by accident, the system would treat it as an over-current and trip if an arc flash is seen of reliability reasons.

Adding a CSU will result in an additional operating time depending on the size of the over-current and the number of phases measured.

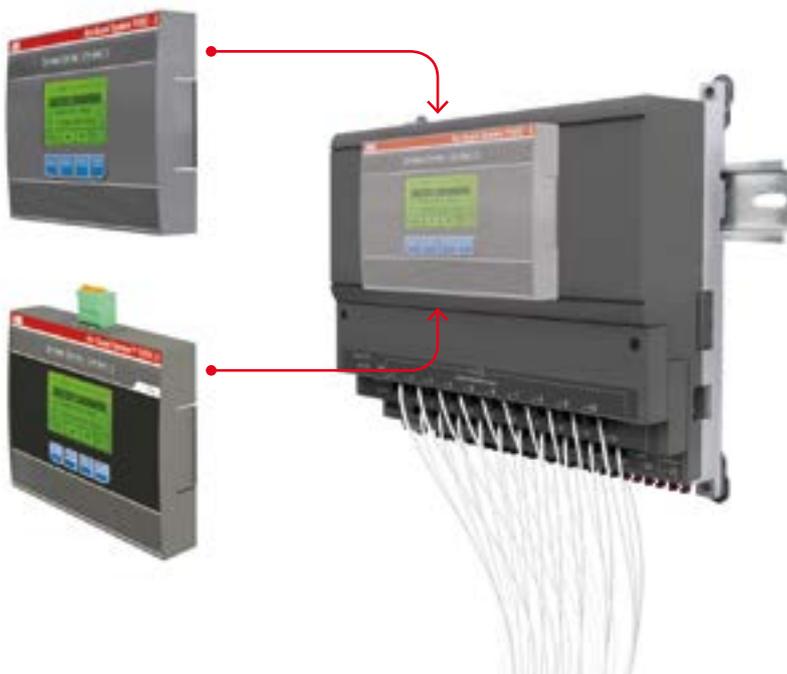

Arc monitor

- 3 IGBT solid state tripping contacts
- 2 change-over trip signal relays
- 1 change-over self supervision alarm relay (IRF)
- 2 current sensing unit inputs
- 1 current sensing unit output

Mounting alternatives

- DIN-rail
- Wall mounting

Optical detector inputs

- 1-10 Main unit X1
- 1-10 Extension module X2
- 1-10 Extension module X3

HMI

- Can be mounted on door
- IP54
- Additional HMI possible
- User-friendly start up menu
- COM Module version available

Ordering details



Arc monitor with HMI

1SFC170004F0002



Arc monitor with COM Module

1SFC170001V0001



Extension unit

1SFC170012F0001



HMI

1SFC170013F0001



COM Module

1SFC170002V0001



Detector cable

1SFC170014F0001

| Description | Rated supply voltage U _c | | Type | Order code | Weight (1 pce) kg |
|-------------|-------------------------------------|------|------|------------|----------------------|
| | V 50/60 Hz | V DC | | | |

Arc monitor

| | | | | | |
|--|-----------|-----------|--------------|-----------------|------|
| including one HMI and door mounting accessories | - | 24...48 | TVOC-2-48 | 1SFA664001R1002 | 0.95 |
| | 100...240 | 100...250 | TVOC-2-240 | 1SFA664001R1001 | |
| including one COM Module and door mounting accessories | - | 24...48 | TVOC-2-48-C | 1SFA664001R1004 | 0.95 |
| | 100...240 | 100...250 | TVOC-2-240-C | 1SFA664001R1003 | |

Accessories

| Description | Type | Order code | Weight (1 pce) kg |
|-------------|------|------------|----------------------|
|-------------|------|------------|----------------------|

Extension

| | | | |
|--|-----------|-----------------|------|
| 10 optical inputs | TVOC-2-E1 | 1SFA664002R1001 | 0.15 |
| 10 optical inputs for cable TVOC-2-DP60 only | TVOC-2-E3 | 1SFA664002R3001 | 0.15 |

HMI (Human Machine Interface)

| | | | |
|------------|-----------|-----------------|------|
| additional | TVOC-2-H1 | 1SFA664002R1005 | 0.15 |
|------------|-----------|-----------------|------|

COM Module

| | | | |
|---|------------|-----------------|------|
| with communication interface (Modbus RTU) and door mounting accessories | TVOC-2-COM | 1SFA664002R4001 | 0.15 |
|---|------------|-----------------|------|

Detectors

| | | | | |
|--------------|----------|-------------|-----------------|------|
| Cable length | 1 m | TVOC-2-DP1 | 1SFA664003R1010 | 0.02 |
| | 2 m | TVOC-2-DP2 | 1SFA664003R1020 | 0.02 |
| | 4 m | TVOC-2-DP4 | 1SFA664003R1040 | 0.04 |
| | 6 m | TVOC-2-DP6 | 1SFA664003R1060 | 0.60 |
| | 8 m | TVOC-2-DP8 | 1SFA664003R1080 | 0.80 |
| | 10 m | TVOC-2-DP10 | 1SFA664003R1100 | 0.10 |
| | 15 m | TVOC-2-DP15 | 1SFA664003R1150 | 0.15 |
| | 20 m | TVOC-2-DP20 | 1SFA664003R1200 | 0.20 |
| | 25 m | TVOC-2-DP25 | 1SFA664003R1250 | 0.25 |
| | 30 m | TVOC-2-DP30 | 1SFA664003R1300 | 0.30 |
| | 60 m (1) | TVOC-2-DP60 | 1SFA664003R3600 | 0.60 |

(1) Only to be used with TVOC-2-E3

Ordering details



CSU

1SFC1700039F0002



Optical cable TVOC-2 – CSU

1SFC170017F0001




Optical cable TVOC-2 – TVOC-2

1SFC170016F0001



Cable strap

1SFC170010F0001



Mounting kit

1SFC170010F0001



Label

1SFC170014F0001



Mounting bracket

1SFC170015F0001

| Description | Type | Order code | Weight (1 pce) kg |
|----------------------|------|--------------|-------------------|
| Current sensing unit | CSU | 1SFA663002-A | 1.500 |

Optical cable between TVOC-2 Arc monitor and Current Sensing Unit (CSU)

| Cable length | Type | Order code | Weight (1 pce) kg |
|--------------|----------------|-----------------|-------------------|
| 0.5 m | TVOC-1TO2-OP05 | 1SFA664004R2005 | 0.010 |
| 1 m | TVOC-1TO2-OP1 | 1SFA664004R2010 | 0.010 |
| 2 m | TVOC-1TO2-OP2 | 1SFA664004R2020 | 0.020 |
| 4 m | TVOC-1TO2-OP4 | 1SFA664004R2040 | 0.040 |
| 6 m | TVOC-1TO2-OP6 | 1SFA664004R2060 | 0.060 |
| 8 m | TVOC-1TO2-OP8 | 1SFA664004R2080 | 0.080 |
| 10 m | TVOC-1TO2-OP10 | 1SFA664004R2100 | 0.100 |
| 15 m | TVOC-1TO2-OP15 | 1SFA664004R2150 | 0.150 |
| 20 m | TVOC-1TO2-OP20 | 1SFA664004R2200 | 0.200 |
| 25 m | TVOC-1TO2-OP25 | 1SFA664004R2250 | 0.250 |
| 30 m | TVOC-1TO2-OP30 | 1SFA664004R2300 | 0.300 |

Optical cable between two TVOC-2 Arc monitors (transferring CSU signal)

| Cable length | Type | Order code | Weight (1 pce) kg |
|--------------|-------------|-----------------|-------------------|
| 0.5 m | TVOC-2_OP05 | 1SFA664004R1005 | 0.01 |
| 1 m | TVOC-2-OP1 | 1SFA664004R1010 | 0.01 |
| 2 m | TVOC-2-OP2 | 1SFA664004R1020 | 0.02 |
| 4 m | TVOC-2-OP4 | 1SFA664004R1040 | 0.04 |
| 6 m | TVOC-2-OP6 | 1SFA664004R1060 | 0.06 |
| 8 m | TVOC-2-OP8 | 1SFA664004R1080 | 0.08 |
| 10 m | TVOC-2-OP10 | 1SFA664004R1100 | 0.10 |
| 15 m | TVOC-2-OP15 | 1SFA664004R1150 | 0.15 |
| 20 m | TVOC-2-OP20 | 1SFA664004R1200 | 0.20 |
| 25 m | TVOC-2-OP25 | 1SFA664004R1250 | 0.25 |
| 30 m | TVOC-2-OP30 | 1SFA664004R1300 | 0.30 |

Optical cable between two Current Sensing Units (CSUs)

| Cable length | Type | Order code | Weight (1 pce) kg |
|--------------|------|-----------------|-------------------|
| 0.5 m | | 1SFA663004R1005 | 0.01 |
| 1 m | | 1SFA663004R1010 | 0.01 |
| 2 m | | 1SFA663004R1020 | 0.02 |
| 4 m | | 1SFA663004R1040 | 0.04 |
| 6 m | | 1SFA663004R1060 | 0.06 |
| 8 m | | 1SFA663004R1080 | 0.08 |
| 10 m | | 1SFA663004R1100 | 0.10 |
| 15 m | | 1SFA663004R1150 | 0.15 |
| 20 m | | 1SFA663004R1200 | 0.20 |
| 25 m | | 1SFA663004R1250 | 0.25 |
| 30 m | | 1SFA663004R1300 | 0.30 |

Other accessories

| Description | Type | Order code | Weight (1 pce) kg |
|-------------|------|------------|-------------------|
|-------------|------|------------|-------------------|

Cable straps

| | | | |
|--------------------|------------|-----------------|------|
| 1 set incl. 50 pcs | TVOC-2-MK1 | 1SFA664006R1001 | 0.10 |
|--------------------|------------|-----------------|------|

Mounting kit

| | | | |
|-------------|--|-----------------|------|
| 600 mm | | 1SFA663006R1001 | 0.35 |
| 800/1000 mm | | 1SFA663006R1002 | 0.60 |

Label

| | | | |
|--------------------|--|-----------------|------|
| 1 set incl. 10 pcs | | 1SFA663005R1001 | 0.02 |
|--------------------|--|-----------------|------|

Mounting bracket

| | | | |
|--|--|-----------------|------|
| 1 set incl. 5 bracket pcs and 10 cable strap pcs | | 1SFA663006R1010 | 0.25 |
|--|--|-----------------|------|

Technical data

Optical inputs and output

| | |
|---|---|
| Optical detectors | 10 inputs on Arc monitor |
| | 10 inputs on Extension unit X2 (optional) |
| | 10 inputs on Extension unit X3 (optional) |
| Current signal from CSU | 2 inputs: X1.21, X1.22 (optical) |
| Forward current signal to another Arc monitor | 1 output: X1.23 (optical) |

Breaker trip contacts (K4, K5, K6)

| | | | |
|--|---|-------|-------|
| Solid state tripping contacts | 3 NO solid state type IGBT | | |
| Rated voltage | 250 V AC / DC | | |
| Make and carry for 0.2 s | 30 A | | |
| Make and carry for 1 s 0.15% duty ration | 10 A | | |
| Breaking capacity | 250 V | 1.5 A | AC-15 |
| | 250 V | 1 A | DC-13 |
| | 110 V | 3 A | DC-13 |
| | 48 V | 3 A | DC13 |
| | Reinforced insulation between separate contacts | | |
| | Voltage drop 5 V 30 A, 3 V 3 A, 2 V 10 mA | | |
| | Off state current < 1 mA at 250 V 60 Hz | | |
| | Min. recommended load current 10 mA | | |

Signal relay outputs (K2, K3)

| | | | |
|---------------------------------------|---|-------|-------|
| Manual or auto resetable | 2 CO gold-plated contacts | | |
| Rated voltage | 250 V AC / DC | | |
| Continuous carry I _{th} | 5 A | | |
| Make and carry for 0.2 s | 30 A | | |
| Make and carry for 3 s 10% duty ratio | 15 A | | |
| Breaking capacity | 250 V | 3 A | AC-15 |
| | 250 V | 0.3 A | DC-13 |
| | 110 V | 0.6 A | DC-13 |
| | 48 V | 2 A | DC-13 |
| | Reinforced insulation between separate contacts | | |
| | I _{th} = 5 A | | |
| | Min switching load: | | |
| | 1 mA at 5 V DC with contacts not used for switching current | | |
| | > 0.5 A if inductive/capacitive load before. | | |

Internal Relay Fault (IRF) signal (K1)

| | | | |
|-----------------------------------|---|--------|-------|
| Self supervision alarm relay | 1 CO gold-plated contact | | |
| Rated voltage | 250 V AC/DC | | |
| Continuous carry, I _{th} | 5 A | | |
| Make and carry for 3 s | 8 A | | |
| Breaking capacity | 250 V | 1.5 A | AC-15 |
| | 250 V | 0.15 A | DC-13 |
| | 110 V | 0.3 A | DC-13 |
| | 48 V | 0.5 A | DC-13 |
| | Reinforced insulation between separate contacts | | |
| | I _{th} = 5 A | | |
| | Min switching load: | | |
| | 1 mA at 5 V DC with contacts not used for switching current | | |
| | > 0.5 A if inductive/capacitive load before | | |

Technical data

Settings and indications

| | |
|---|--|
| Connections for HMI on base module | 1 output RJ45 male at front side 1 output RJ14 female at right side |
| Display on HMI | 52 x 26 mm graphic LCD with LED backlight |
| Keyboard on HMI | Membrane buttons, 4 soft keys |
| LED signal on HMI | Power, Trip, Error |
| LED signal on Arc monitor and extension units | Power, Trip |
| Configuration switches | 8-pole DIP-switch on Arc monitor front |
| Settings (HMI) | Time and display language |
| COM Module version | Modbus RTU protocol |
| Configuration (DIP switches) | Manual or auto reset of K2 and K3 Use of CSU or not Trip configuration |
| Display information | Trip log, connected modules, actual configuration self diagnostic test result and error log |

| Power supply | TVOC-2-240 | TVOC-2-48 |
|--------------------------------------|--|---|
| Rated supply voltage, Us | 100-240 V AC, 50-60 Hz 100-250 V DC | 24 - 48 V DC Possibility to connect two power supplies for redundancy. (Common minus) |
| Us variation | AC -20% - +10% DC -25% - +30% | DC -25% - +30% |
| Rated insulation voltage, Ui | 250 V with reinforced insulation | 250 V with reinforced insulation |
| Rated impulse withstand Voltage Uimp | 4 kV | 4 kV |
| Main MCB/fuse | Max. 10 A char. C/fuse 10 A gG | Max 6A, MCB ABB Type S202 Z6A |
| Power consumption | 5 W | 5W |

Start-up time

| | | |
|---------------|-----------------------|------------------------|
| Trip possible | < 15 ms from power on | < 100 ms from power on |
|---------------|-----------------------|------------------------|

Reaction time

| | |
|--|---|
| From light detection to trip (contacts K4, K5, K6) | Approx. 1 ms (depends on light intensity) |
| From light detection to indication signal (relay K2, K3) | < 10 ms |
| Current condition from input to output | < 0.4 ms |

Environmental conditions

| | |
|---------------------------------|---|
| Altitude | Less than 2000 m above sea level. |
| Permissible ambient temperature | -25 to +55°C |
| Degree of protection | IP20 Arc monitor IP54 HMI front side |

Detector cable

| | |
|---|--|
| Maximum length | 30 m with Arc monitor and extension – E1 60 m with extension – E3 |
| Service temperature range | -25 to +70°C continuous -25 to +85°C short-time |
| Smallest permissible bending radius | 45 mm after installation 10 mm on handling |
| Acceptable backlight intensity light without tripping | 3000 Lux |

Optical cable

| | |
|----------------|------|
| Maximum length | 30 m |
|----------------|------|

Standards

| | |
|--|---|
|         | |
| UL508 | Industrial control equipment |
| CSA C22.2 No.14 | Industrial control equipment |
| IEC 61508 | Functional safety of electrical/electronic/programmable electronic safety-related systems |
| IEC EN60947-1 | Low voltage switchgear and controlgear – Part 1: General rules |
| IEC EN60947-5-1 | Low voltage switchgear and controlgear – Part 5-1: Control circuit devices and switching elements - Electromechanical control |
| IEC 61010-1 | Safety requirements for electrical equipment for measurement, control and laboratory use |

Applications

Basic installation tips

Arc monitor (TVOC-2)

The Arc monitor can be mounted anywhere in the switchgear, e.g. in the breaker cubicle or in a separate control cabinet. Tripping is handled by a separate tripping circuit. The task of the Arc monitor is to close the circuit very quickly. You can connect up to 3 breakers in this way and, if required, trip different breakers depending on where the arc occurs.

CSU (Current Sensing Unit)

The CSU is an accessory used if you cannot prevent direct sunlight or other highly intensive light reaching the sensors frequently. CSUs can be mounted in series if more than two are needed.

Connection of current transformers (for CSU)

The CSU measures either 1, 2 or 3-phase. Three-phase is, however, preferable for reasons of safety and reliability. Current transformers with a secondary current of 1, 2 or 5 A are used for this purpose.

Note: Current transformers for relay protection are preferable since they do not saturate as quickly as standard current transformers. The transformers should not saturate before at least twice the set over-current level.


Detectors

Detector cables are available in standard lengths (see ordering details). They cannot be cut or joined. Avoid sharp bends or pinching when installing the cables.

The plastic fiber is made of polymethylene acrylate (PMMA) with a polyethylene jacket. Each detector consists of an optical cable and a lens that are calibrated together to give the same sensitivity independent of cable length. The detector has a plug-in connector that fits the Arc monitor. The lens collects light from all directions, with the exception of a small shaded area behind the detector (see the polar diagram). Practical experiments have shown that arc light reflected between metallic surfaces is normally sufficient to cause tripping.


Detector positioning

The basic strategy for positioning the sensors is to make sure to cover all parts that may suffer from an arc. Typically this involves the horizontal and vertical bus bar system and the breaker cubicle. If possible, it's also normally preferable to supervise each cubicle. Avoid placing the detector so that it sees the normal light from a breaker. The sensor can detect arcs within a 3-meter distance (see illustration). To raise the safety level even higher, you can separate them at a 1.5-meter distance, thereby creating redundancy between them.

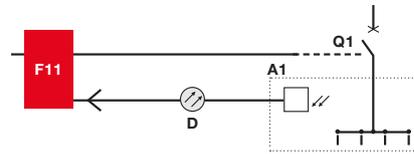


Arc Guard System™ with Arc monitor


| | |
|-----|----------------------|
| A1 | Switchgear |
| F11 | Arc monitor |
| F21 | Current Sensing Unit |
| T1 | Current transformer |
| Q1 | Circuit-breaker |

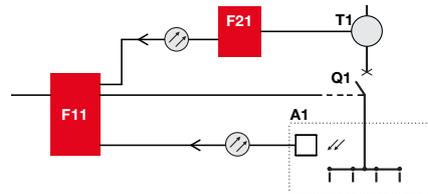

Arc Guard System™ with Arc monitor and Current Sensing Unit

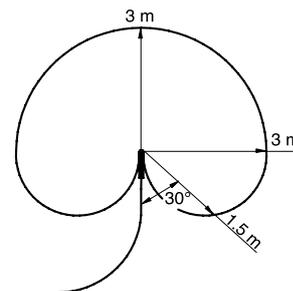

Polar diagram of detector

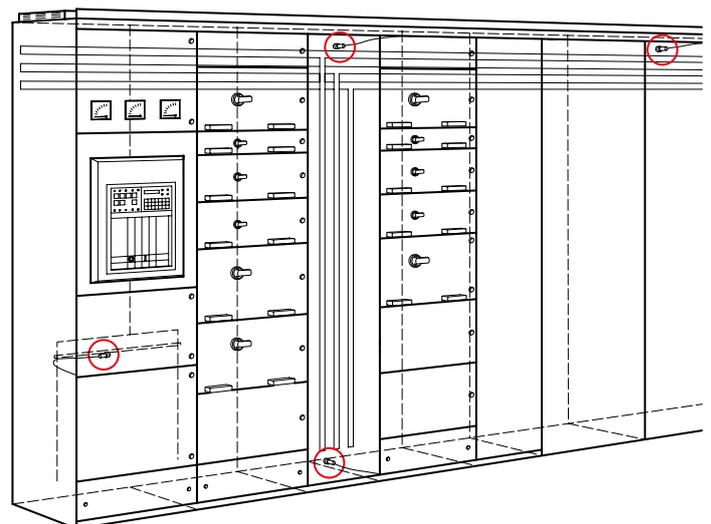


Example showing the position of detectors in:
1. Horizontal and vertical bus bar system
2. Circuit-breaker cubicle

Applications Diagrams


Example 1:

Arc Guard System™ installed to trip all breakers in case of an arc.

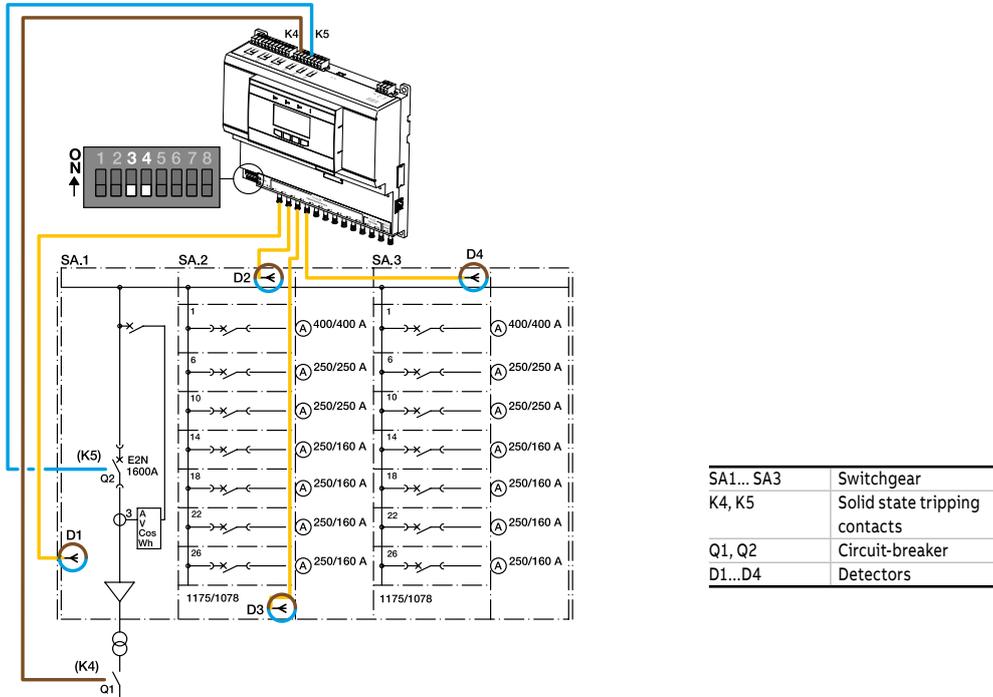

Example 2:

Arc Guard System™ installed to trip different breakers depending on where the arc occurs.

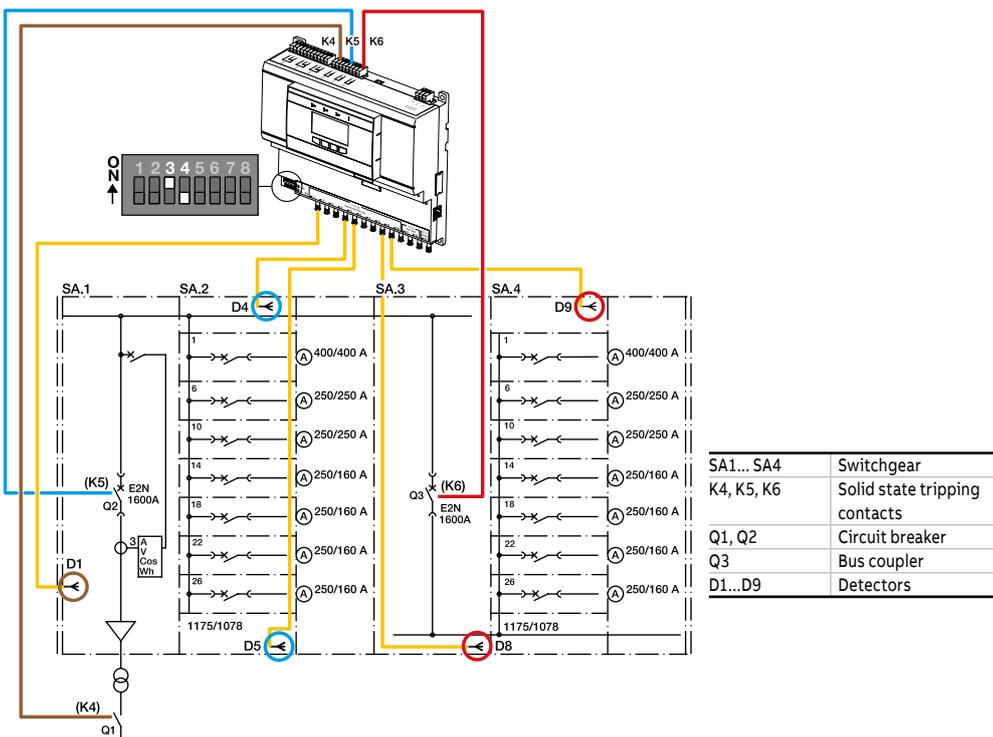

Configuration

Trip condition configuration – Manual/auto reset configuration

System configuration using DIP switch

DIP switches are used to configure the system regarding use of current condition (activated CSU inputs) and assigning detectors to breaker trip outputs (so-called selectivity). They are located on the front (low, left) of the Arc monitor.

DIP switches


| | | | |
|------------|---|------------|----------------------------------|
| Sw1 | Current condition inputs Terminals X1:21-22 | Sw5 | Not used |
| Sw2 | Current condition output Terminal X1:23 | Sw6 | Autoreset K2, K3 (signal relays) |
| Sw3 | Trip output assign | Sw7 | Not used |
| Sw4 | Trip output assign | Sw8 | Not used |

Breaker trip output

| Breaker trip output | Detector inputs |
|---------------------|-------------------|
| Output relay K4 | Terminals X1:1-10 |
| Output relay K5 | Terminals X2:1-10 |
| Output relay K6 | Terminals X3:1-10 |

Trip condition configuration


TVOC-2 can be configured to trip selected breakers depending on which detector is signalling for an arc. This can be used to trip sections of a switchgear or use one monitor for several small switchgears. It also has an option to add a current condition, see page 13.

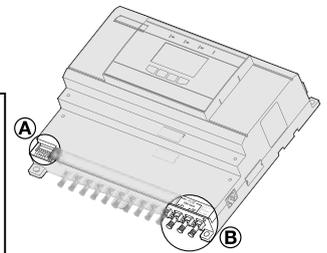

| Symbol description | | Configurable tripping relays | | | |
|--------------------|----------------------------|---|-----|-----|---|
| | Arc detected | | | | |
| | Arc not detected | | | | |
| (A) | Configuration 1 | Standard configuration, trip all breakers | Sw3 | Sw4 | Function detectors Any detection trips all breakers K4, K5, K6 |
| | Configuration 2 | Trip different breaker depending on extension module | 0 | 1 | Detectors X1 operate K4 Detectors X2 operate K5 Detectors X3 operate K6 |
| | Configuration 3 | Trip different breaker depending on detector (1-3, 4-6, 7-) | 1 | 0 | Detectors X1:1-3 operate K4 Detectors X1:4-6 operate K5 Detectors X1:7-10, X2 and X3 operate K6 |

Manual/auto reset configuration

The signal relays K2, K3 can be configured to react as the trip contacts (auto reset) or to be de-energized by manual reset on the HMI. See below for explanation.

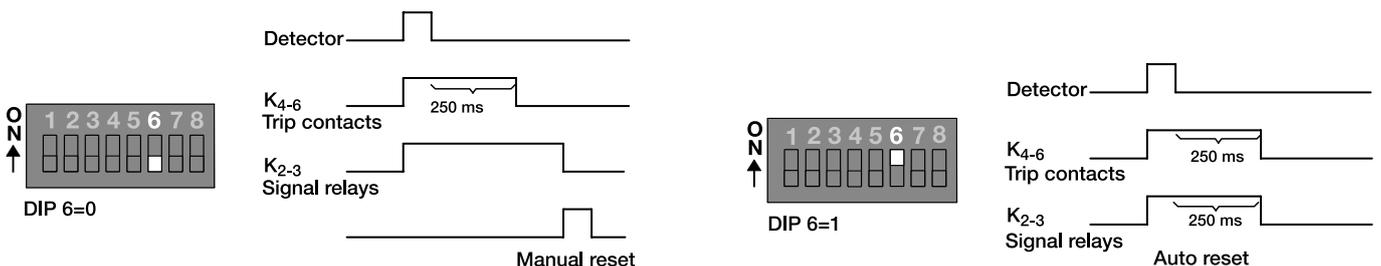






Configuration


Current condition configuration

Normal trip configuration with additional current condition

A current condition is an option that could be used to avoid the risk of nuisance tripping due to strong light from other sources than arcs. The main risks are light from arc chutes and direct sunlight, which in normal cases can be avoided. Therefore the standard configuration is without CSUs (Current Sensing Units).

All trip configurations on page 12 can be combined with an additional current condition. It is possible to connect up to two CSUs directly to the Arc monitor (AM) (input 21 and 22). To connect additional current sensing units in series is also possible if required. To share the current condition between different Arc monitors can be done by connecting output 23 on the first Arc monitor to the standard CSU input on the other. The Arc monitor will then block the trip condition until it sees an over current.

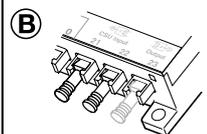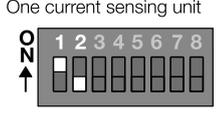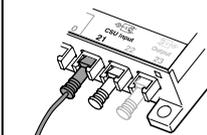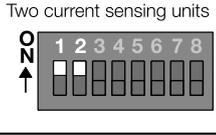
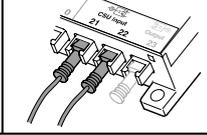
| No current sensing unit | | Sw1 | Sw2 | Function current condition |
|---|---|-----|-----|----------------------------|
|  |  | 0 | 0 | Not used |
|  |  | 1 | 0 | Input CSU21 used |
|  |  | 1 | 1 | Both inputs used |

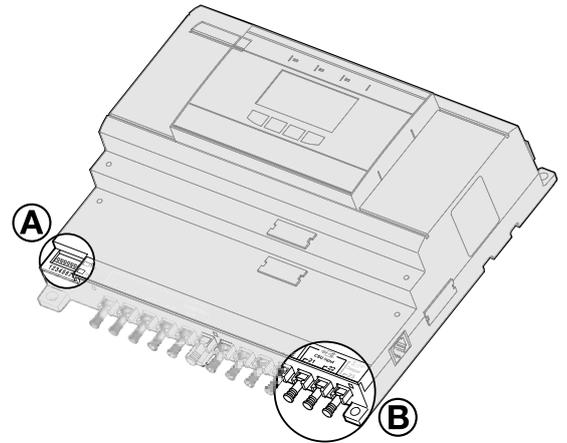

AM (Arc monitor)

Special trip configuration depending on over current


The arc monitor has a special trip configuration that determines trips depending on where it sees the over current. This configuration will then trip different breakers depending on which supply is showing an over current.
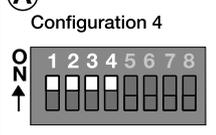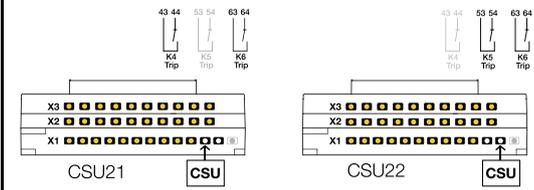
| Symbol description | | Configurable tripping relays | |
|--|---|--|--|
| | Arc detected | | |
| | Arc not detected | | |
| (A) Configuration 4  |  | Any detector + current condition CSU21 operate K4 + K6 Any detector + current condition CSU22 operate K5 + K6 | |


DIP switches 1, 2, 3 and 4 to position ON
 See manual for more details

Dimensions


Arc monitor

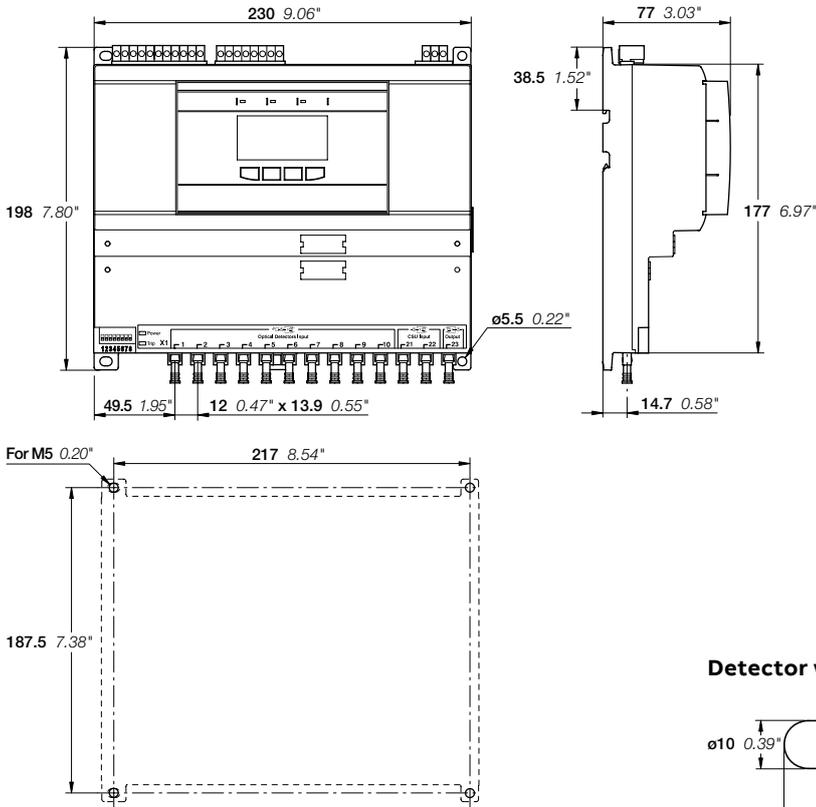


HMI, COM Module

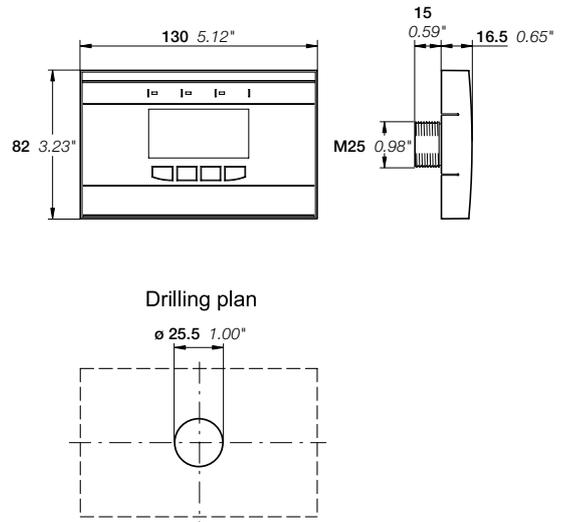


Detector with optical cable

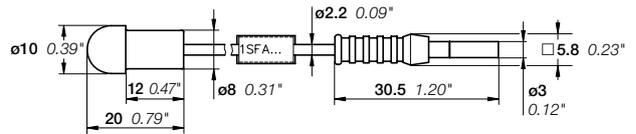

Current Sensing Unit

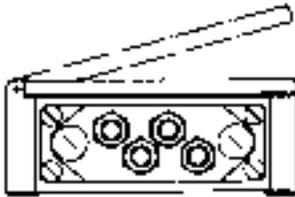


A flange with 6 tapped holes (size 18.6 mm), 4 cable glands (sealing diameter 5.5-8.5 mm), and 2 plastic blank plugs are supplied.

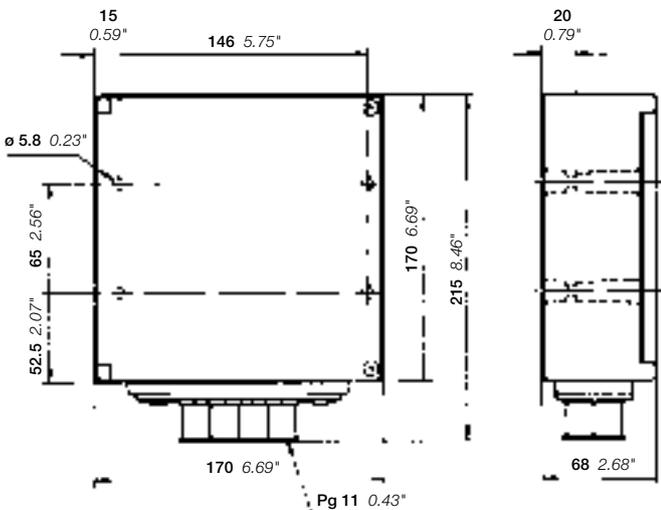

Circuit diagrams

Arc monitor


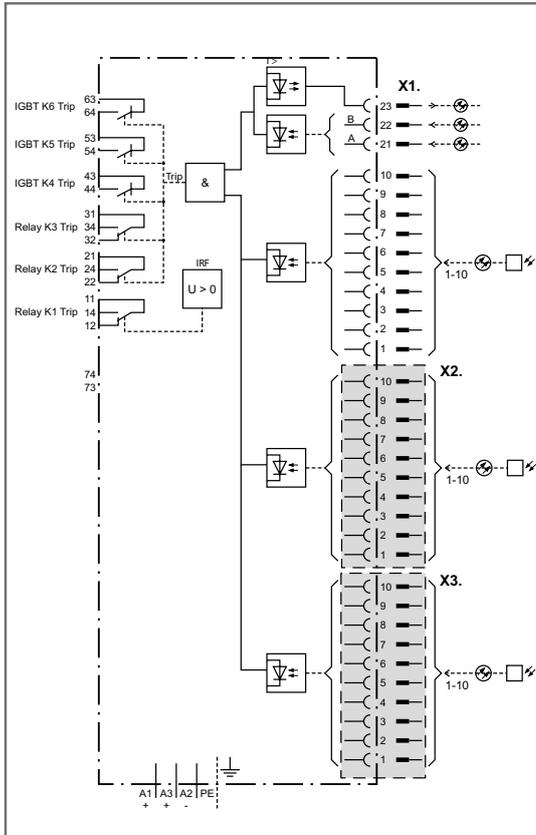


TVOC-2-48 1SFA6641001R1002

Arc monitor

| Terminals | |
|-----------------------|---|
| X1 1-10 | Detector input |
| X2 1-10 | Extra detector unit detector input (option) |
| X3 1-10 | Extra detector unit detector input (option) |
| A1, A2 | Power supply |
| TVOC-2-48: A1, A2, A3 | Power supply |
| PE | Power supply |
| 43, 44 | Solid-state contacts |
| 53, 54 | Solid-state contacts |
| 63, 64 | Solid-state contacts |
| 11, 12, 14 | Indication contacts |
| 21, 22, 24 | Indication contacts |
| 31, 32, 34 | Indication contacts |

Current Sensing Unit

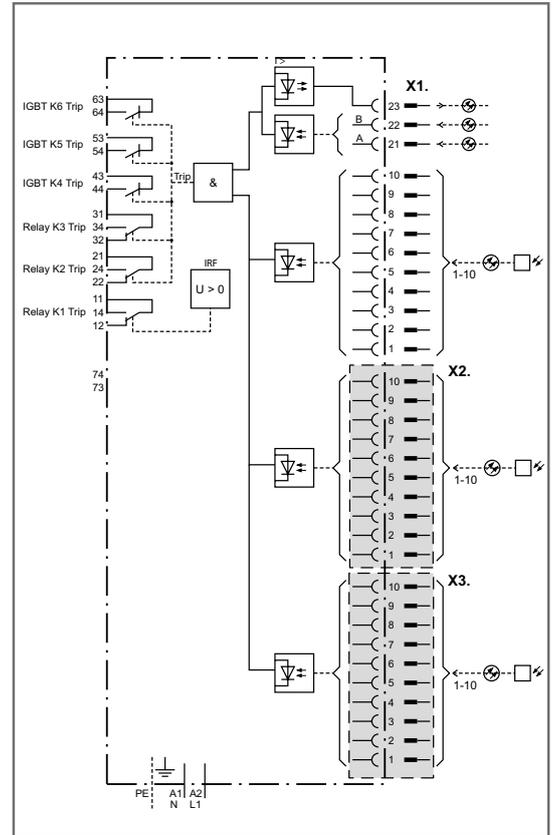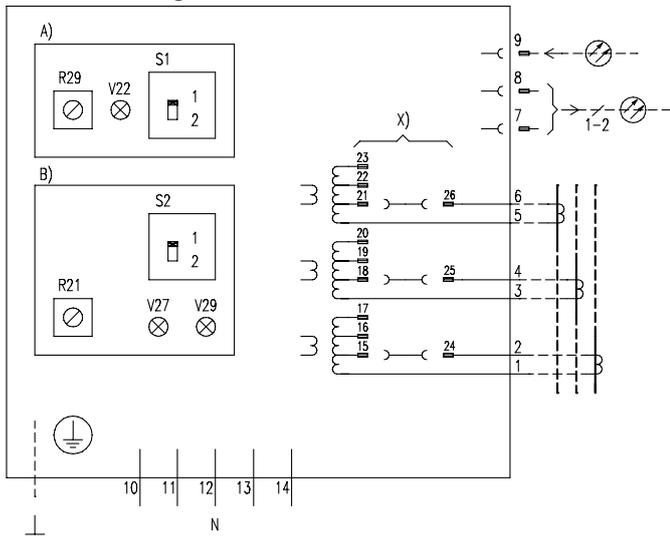

TVOC-2-240 1SFA664001R1001

Current Sensing Unit

| Terminals | |
|-----------|--|
| 1 ... 6 | Current transformer terminals |
| 7 and 8 | Output current signal to another Current Sensing Unit or Arc monitor |
| 9 | Input current signal from another Current Sensing Unit |

Power supply terminals

| | |
|-----------|-------------------------------|
| 10 and 12 | 24 V DC |
| 11 and 12 | 60 V DC |
| 11 and 12 | 48 V DC Interconnection 11-13 |
| 13 and 12 | 110 V - 125 V AC / DC |
| 14 and 12 | 220 V DC, 230 V AC |

A) Testing facilities:

| | |
|-----|---|
| R29 | Simulating a test current |
| S1 | 1 = Test position 2 = Operation position |
| V22 | Red ON = S1 in test position OFF = S1 in operation position |

B) Setting facilities:

| | |
|-----|---|
| R21 | Overcurrent setting |
| S2 | 1 = Input 9 not used 2 = Input 9 used |
| V27 | Yellow ON = Load current less than 70% of set overcurrent level OFF = Load current more than 70% of overcurrent level |
| V29 | Green ON = Load current less than set overcurrent level OFF = Load current more than set overcurrent level |

X) Current range bridge connections

| | |
|-----|---------------------|
| 1A: | 24-17, 25-20, 26-23 |
| 2A: | 24-16, 25-19, 26-22 |
| 5A: | 24-15, 25-18, 26-21 |



ABB AB

Electrification Products Division

Low Voltage Products and Systems

Smart Power

Motorgränd 20

SE-721 61 Västerås / Sweden

You can find the address of your local sales organisation on the ABB home page.



<http://new.abb.com/low-voltage/products/arc-guard>



<http://www.abb.com/lowvoltage>

We reserve the right to make technical changes or modify the contents of this document without prior notice. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

Copyright© 2019 ABB - All rights reserved