


SMART CLEANER 1.25mm

PART NUMBER: SCK-SS-125A

FOR CLEANING LC AND MU CONNECTORS

Data Sheet


Key Product Features

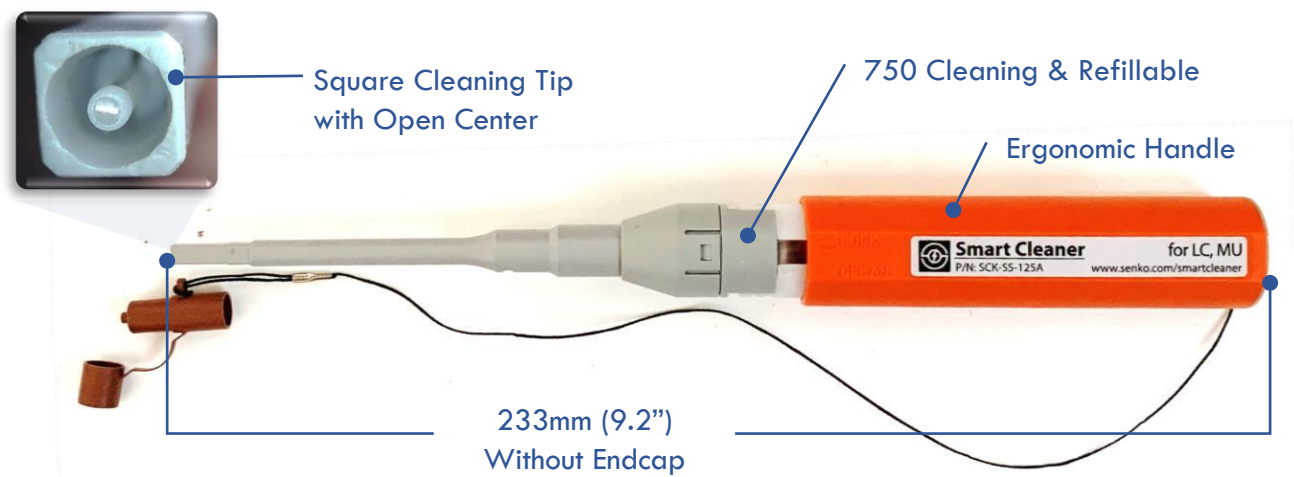


Advantages of the Square Tip With Open Center

- Greater precision for the alignment of cleaning tip
- Increased stability cleaning in adapter LC and MU connectors


Examples Cleaning Using A Single Engagement

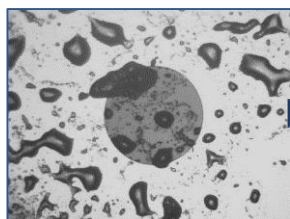

Skin Oil Residue

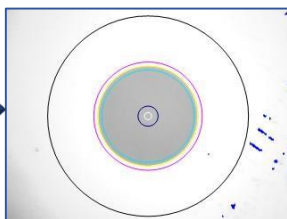


ISO 12103-1
Fine Test dust

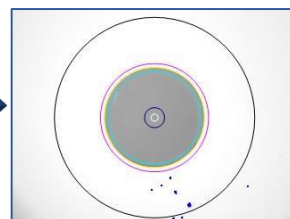

Cleaning In Adapter Connectors

- 1 Place the brown endcap in the rear of the handle
- 2 Insert the cleaner into the adapter
- 3 Push the cleaner completely forward one time

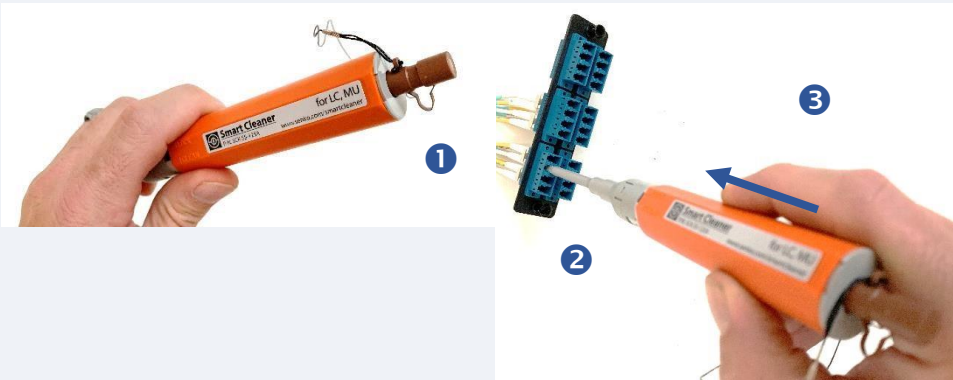

www.senko.com

Americas

USA East 1-888-32-SENKO
USA West 1-858-623-3300
TEXAS 1-972-661-9080
Sales-Americas@senko.com

Brazil

Brazil +55-21-3736-7065
Sales-Brazil@senko.com

Asia

Hong Kong +852-2121-0156
Shanghai +86-21-5830-4513
Shenzhen +86-755-2533-4893
Sales-Asia@senko.com

Europe

UK +44(0) 1256-700880
Italy +39 011 839 98 28
Poland +48 71 396 36 59
Sales-Europe@senko.com

Asia Pacific

Australia +61 (0) 3 9755 7922
Sales-Asia-Pacific@senko.com

Japan

Tokyo +81 (0) 3 5825 0911
Sales-Japan@senko.com

Cleaning Unmated Connectors

- 1 Place the brown endcap on the gray barrel
- 2 Open the cover on the brown endcap and insert assembly
- 3 Push the cleaner completely forward one time

